
Adapter Guide

Schematic - Thread Cutaway

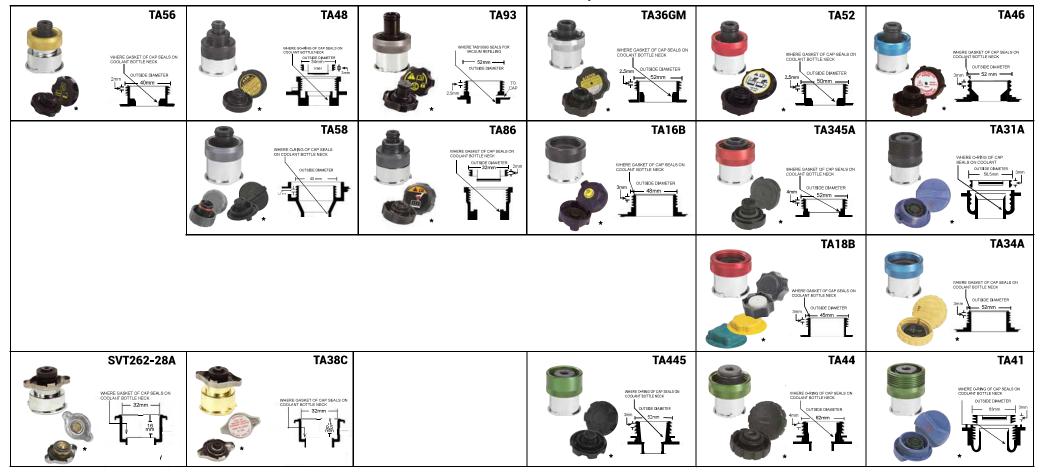

* Actual radiator cap shown for reference

Technical Support 877-762-7664

Application Guide www.snaponradiatortools.com

18 piece Anodized Aluminum Cooling System Adaptor Set



Adapter Guide

Applications

Carl D	5
6.	0

TA56 Cap Adaptor: TA57

Superchargers on some models of Cadillac®,
Chevrolet® and Saturn®

Chrysler® Pacifica hybrid



Lexus® Some models ('07-) Lotus® Some models Toyota® Celica ('00-'05), Spyder MR2 ('00-'05), RAV4 ('09-), Prius ('04-), Camry ('07-), Highlander ('06-) Scion® XB ('08-'15)

TA48

TA58



TA93

Duramax engine found on Chevrolet® Silverado ('17-) GMC® Sierra ('17-)

Note: adapter is left hand thread and required for vacuum filling



TA36GM

Some models: Buick®, Cadillac®, Chevrolet®, Dodge®, Ford®, Freightliner®, GMC®, Hummer®, Infiniti®, International®, Isuzu®, Jaguar®, Jeep®, Land Rover®, Lincoln®, Mazda®, Mercedes-Benz®, Mercury®, Nissan®, Pontiac®, Saab®, Saturn®, Suzuki®



TA52

Aston Martin® 6.0L V-12 ('15-) Ford® models with male threads on filler neck ('13-) Land Rover® LR-2 ('08-), Range Rover Evoque ('12-) Mazda® Mazda 3 ('04-) Volvo® most models ('04-)



TA46

Some models: Aston Martin®, Ford®, Jaguar®, Mazda®



Cap Adaptor: TA59

Dodge® Sprinter Van ('07-'10) Freightliner® Sprinter Van ('07-'10) Mercedes-Benz® A-Class ('19-), B-Class (15-), Sprinter Van ('11-'18)



TA86

Hyundai® Kona ('18-), Ioniq ('18-), Nexo ('19-), Tucson ('15-) Kia® Sportage ('16-), Niro ('17-)



TA16B

Audi® models with male threads on filler neck Porsche® Boxter ('85-'97), Cayman ('06), 911 ('99-'15) Smart® car ('08-'15) Volkwagen® models with male threads on filler neck



TA345A

BMW® most models ('88-08) Land Rover® Discovery ('99-'04), Range Rover ('96-'06), Some models with male threads on filler neck

Rubber gasket seals on "shelf" inside



TA31A Cap Adaptor: TA30A

Volkswagen® Most models with female threads on filler neck ('90 - '98)



TA18B

Ferrari®/Maserati® Most models 2000 and newer Jeep® models with male threads on filler neck ('90-'94) Renauk® ('85-'97), Sterling®, Saab® 900 ('78-'93), 900 Convertible, 9000 ('86-'91) Volvo® most models with threaded

fi∎er necks (pre '94)



TA34A

Some models: Cadillac®, Chevrolet®, Daewoo®, Ford®, Jaguar®, Land Rover®, Pontiac®, Saab®, Saturn®, Suzuki®



SVT262-28A

Cap Adaptor: SVT262-29

Many applications including (but not limited to): Acura®, Chrysler®, Dodge®, Eagle®, Ford®, GMC®, Honda®, Hyundai®, hiffiniti®, Kia®, Lexus®, Mazda®, Mitsubishi®, Nissan®, Plymouth®, Subaru®



TA38C

Cap Adaptor: TA39A

Many applications including (but not limited to): Acura®, Chrysler®, Dodge®, Eagle®, Honda®, Lexus®, Mazda®, Mitsubishi®, Plymouth®, Subaru®, Toyota®



TA445

BMW® most models ('07-)



TA44

Cap Adaptor: TA45

Chrysler® Crossfire ('04-'08) Mercedes-Benz® with threaded filler neck on expansion tank (except M-class, '98-'05) Sprinter Van (2019 - current)



TA41A

Audi® A4 ('96-), A6 ('98-), A8 ('97-), Sa ('04'-), TI ('00-) Bentley® ('06-), Lamborghini® ('06-), Porsche® Boxster ('07-'13), Cayenne ('03-'13), Cayenne ('07-'11), Macan ('15-), Panamera ('10-) Volkswagen' most newer models

Corresponding cap adaptor (in BLUE under Adaptor number in chart) available separately Find the correct adaptor by vehicle make/model/year: www.snaponradiatortools.com

Includes plastic storage case: PBSVTA1417

SVTA18000

Snap-on is a trademark, registered in the United States and other countries, of Snap-on Incorporated. All other trademarks are marks of their respective holders. ©Snap-on Incorporated 2020. All rights reserved. Snap-on, 2801 80th Street, Kenosha, WI